




Congratulations on your purchase of a QuitKick Total Stall System - you'll be glad you did!

## Installing Your QuitKick Door System

### Step One: Unpack the system




You should have:

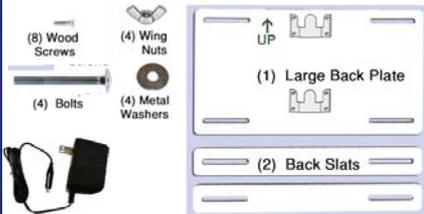

### Step Two: Charge the system



With the switch in the "off" position, charge the main unit over night. (8-12 hours is plenty. Do not charge unit for more than 12 hours.)

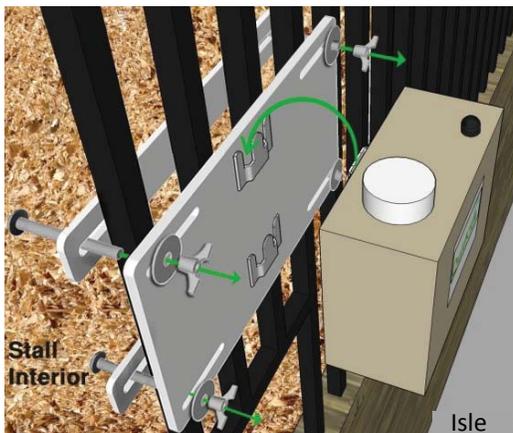

### Step Three: Mount the backplate on the stall

Mount the backplate at approximately the height of your horse's head. The large backplate should be located on the outside of the stall, with the brackets pointing upwards, as shown at left.

*For your horse's safety, insert the bolts through the slots of the smaller plates first, so that they protrude to the **outside** of the stall.*



The system may be mounted on either the stall front or the stall door.

**Caution:** If you mount the unit on the stall front, be sure to allow enough room for sliding doors to slide fully open, without hitting the QuitKick!



### Step Four: Prime the system & adjust the water spray

Before returning the horse to the stall, fill the QuitKick reservoir and slip it onto the mounting brackets. Flip the toggle switch to "on" and simulate a kick to the door. (Note: rubber soled shoes absorb vibration. You may need to lightly tap the system itself.) The QuitKick will respond with two quick squirts of water into the stall. If the bars are interfering with the water jets, minor adjustments can be made by rotating the black sprayer mechanism on the top of the QuitKick box or by loosening the mounting plates and sliding them along the stall bars. It is not necessary for the water to actually hit the horse for the system to be effective.



### **FAQ, Hints and Tips**

QuitKick is a behavior modification system. Consistency is key to correcting stall kicking behavior.

- ALWAYS have the system turned on when the horse is in the stall.
- It is important that only your horse's kicking sets off the system. If the horse in the next stall is also a kicker, it is best to separate them, at least for the initial training period.
- If your horse is indoors while the adjacent stall is being cleaned, turn the QuitKick system off until the chance of accidentally activating the unit has passed.

Batteries:

- Re-charge the QuitKick fully once per week.
- When recharging, always remove the unit from the backplate. The system will not function when it is plugged in.
- Do not allow the battery to become completely run down, or to remain uncharged for long periods. This will harm the battery and render it unable to hold a charge at all.
- In cold weather, batteries cannot hold a charge as efficiently. Expect to have to recharge your unit more often.

If temperatures in your area dip below freezing, replace the water in the QuitKick reservoir with vodka. 100 proof Vodka will not freeze until temperatures reach -40F, (unlike salt water, which freezes at -20F) and will not harm your horse if it accidentally sprays into the animal's eye.

Other Questions? visit [www.QuitKickUSA.com](http://www.QuitKickUSA.com)

QuitKick is fitted at the owner's risk. Do not attempt to activate the unit manually, or use it to correct behaviors other than stall kicking. Do not dismantle the unit for any reason.  
If you have a problem with your QuitKick, contact us at 978-501-0340.